

CONNECTED WASH

ACTIVATE CONNECTED WASH (PAIRING)

This manual applies to the following machines with blue display:

- UC Series (UC-2009)
- PT Series
- UF Series



Is your warewasher operational and successfully connected to your network?
Then activate CONNECTED WASH on your machine now.

1. Open link: <https://my.winterhalter.com/#/cw-pairing>
2. Enter serial number.
3. Carry out pairing. Start the countdown for this (180 seconds) and complete the following steps on your machine:
 - Press the start button and wait 5 seconds (wash cycle is started).
 - Press the start button again and wait 5 seconds (wash cycle is cancelled).
 - Press the start button and wait 5 seconds (wash cycle is started).
 - Press the start button again and wait 5 seconds (wash cycle is cancelled).

Once you have successfully paired the machine with the app, you can utilise all features of CONNECTED WASH. To do this, simply access “DASHBOARD” (<https://my.winterhalter.com/#/cw-dashboard>):

