


CONNECTED WASH

ACTIVATE CONNECTED WASH (PAIRING)

This manual applies to the following machines with black display:

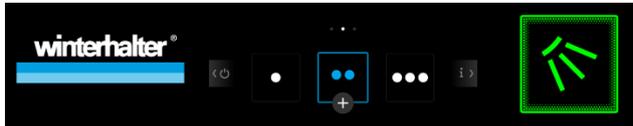

UC Series (V02)
PT Series (V02)



CTR

Is your warewasher operational and successfully connected to your network?
Then activate CONNECTED WASH on your machine now.

1. Open link: <https://my.winterhalter.com/#/cw-pairing>
2. Enter serial number.
3. Carry out pairing. Enter the PIN on your machine's display to do this.

ACTIVATE CONNECTED WASH ON YOUR MACHINE NOW (PAIRING):

1. Connect your machine to the internet using WLAN or LAN.

[To the instructions](#)

2. Activate CONNECTED WASH on your machine. Enter the PIN on your machine's display to do this.

The PIN for machine number 3068386 is:

[To the instructions](#)

3. Check the transfer of your machine data to your user account.

[CONNECTED WASH Portal >](#)

➤ Carry out pairing on the machine:



Once you have successfully paired the machine with the app, you can utilise all features of CONNECTED WASH. To do this, simply access “DASHBOARD” (<https://my.winterhalter.com/#/cw-dashboard>):

